



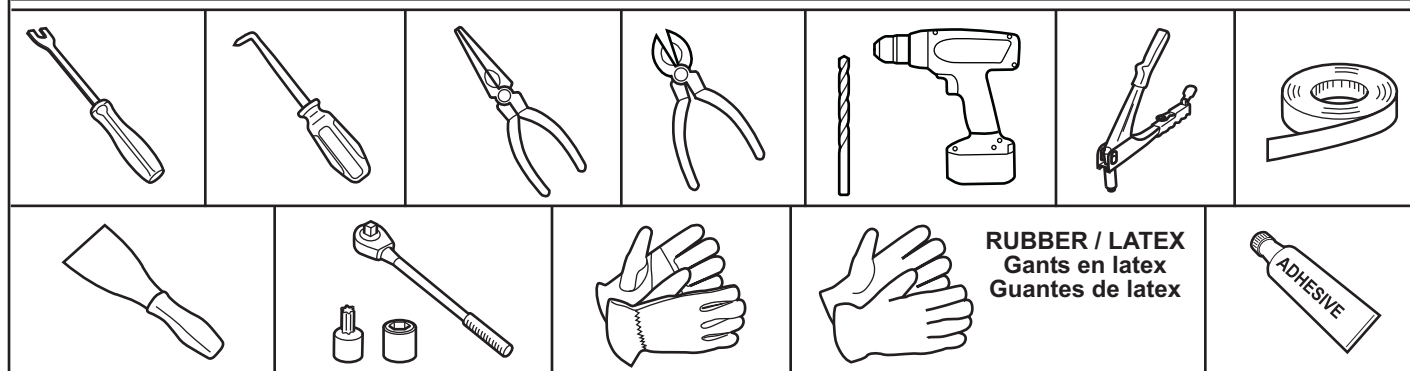

JEEP COMPASS TRAILER HARNESS

JEEP COMPASS REMORQUE HARNAIS
JEEP COMPASS ARNÉS DE REMOLQUE


www.mopar.com

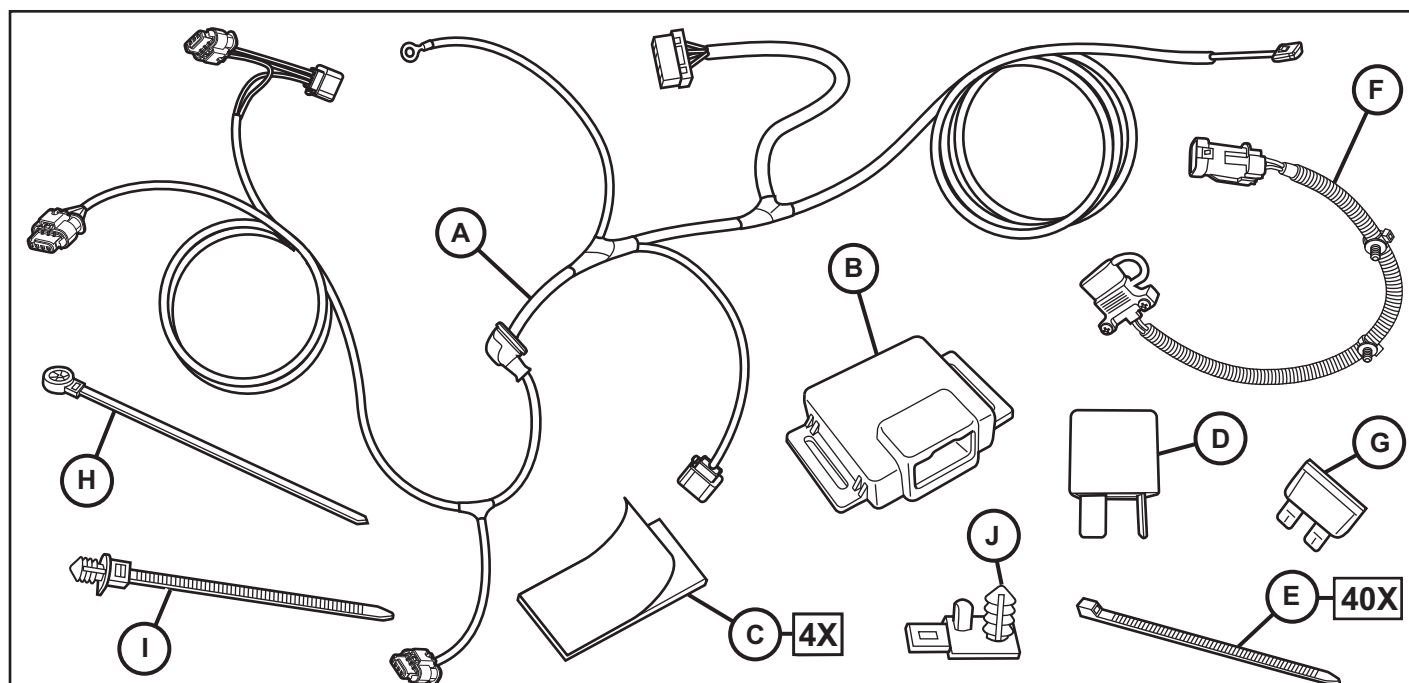

NOTE: VEHICLE MUST BE EQUIPPED WITH TRAILER HITCH BEFORE PROCEEDING

REMARQUE: le véhicule doit être équipé d'attelage de remorque

NOTA: El vehículo debe estar equipado con enganche de remorque

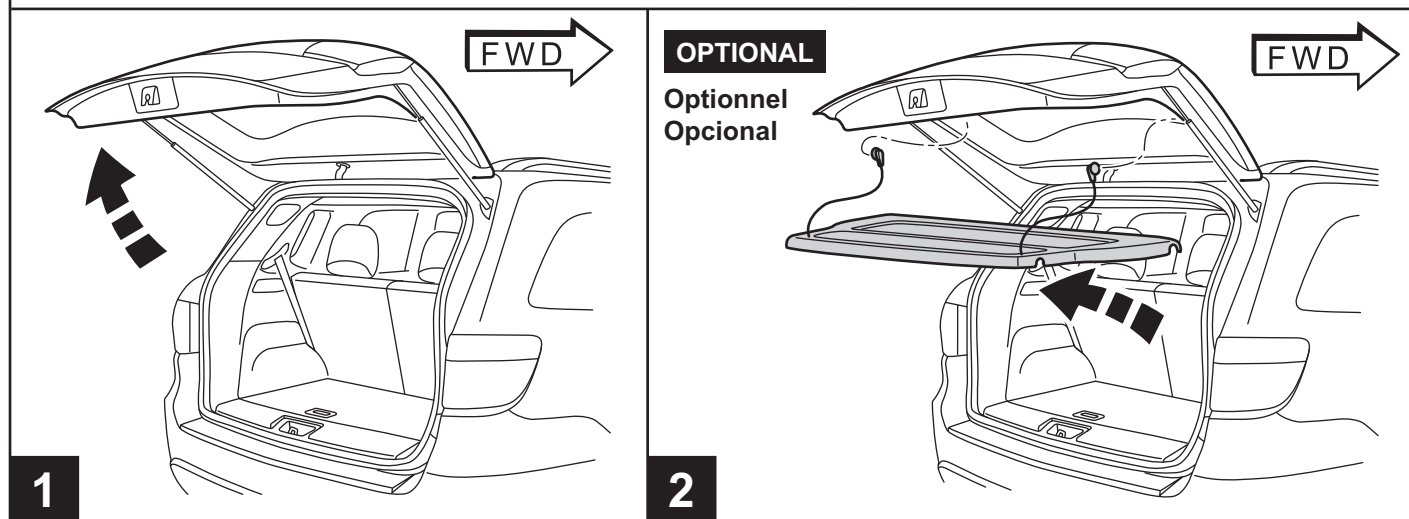

**NOTE: RETAIN ALL FASTENERS
FOR REINSTALLATION**

Maintenir toutes les vis pour la réinstallation
Mantenga todos los tornillos para la reinstalación

**DISCONNECT NEGATIVE
BATTERY TERMINAL**

Débrancher la borne négative de la batterie
Desconecte el terminal negativo de la batería


**NOTE: ALSO DISCONNECT
AUXILIARY BATTERY IF PRESENT**

Remarque: Débrancher la batterie
auxiliaire si nécessaire


Nota: Desconecte la batería
auxiliar si es necesario




3

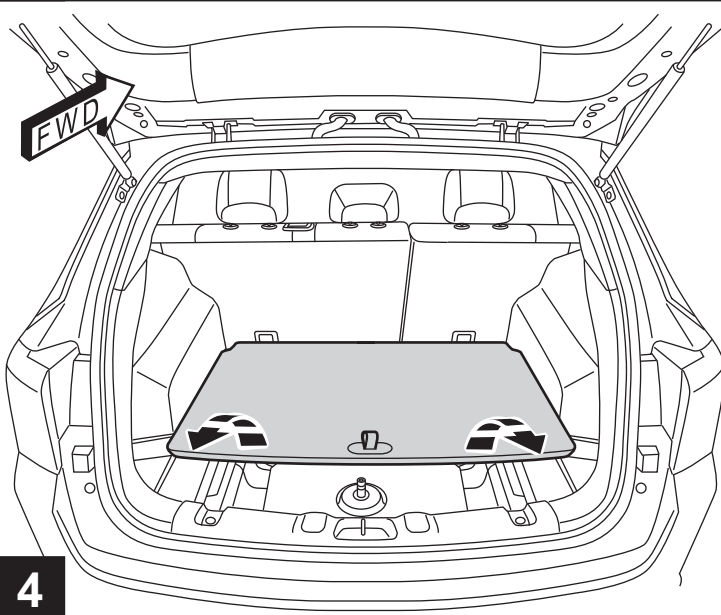

4

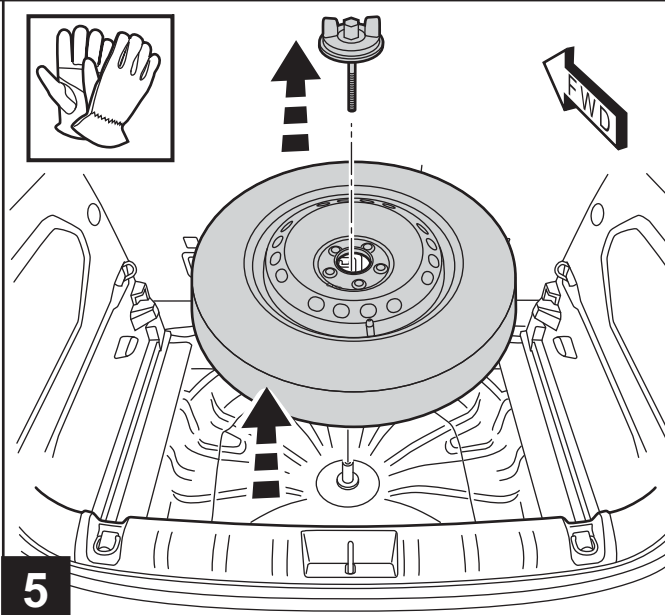


5

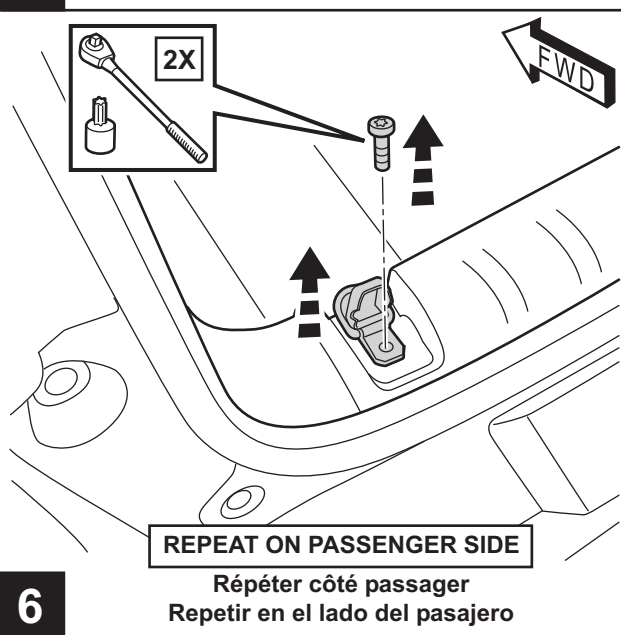


6

REPEAT ON PASSENGER SIDE


Répéter côté passager
Repetir en el lado del pasajero

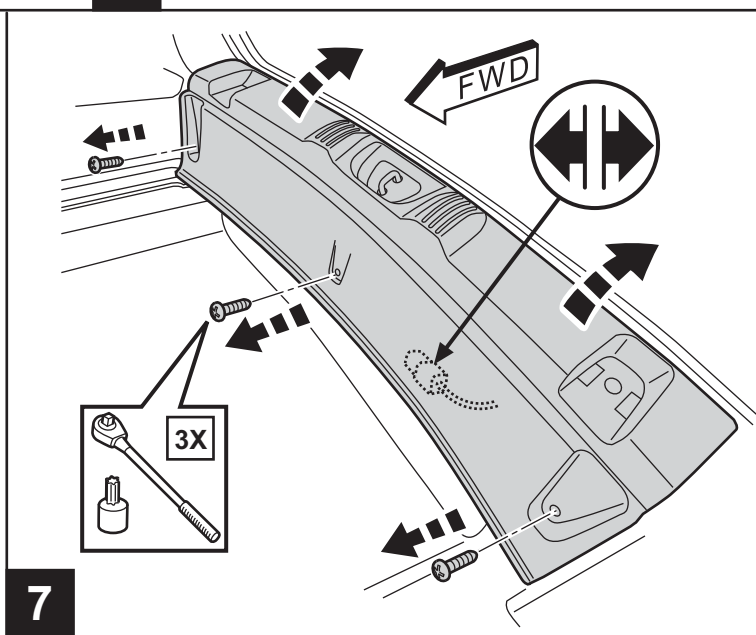


7

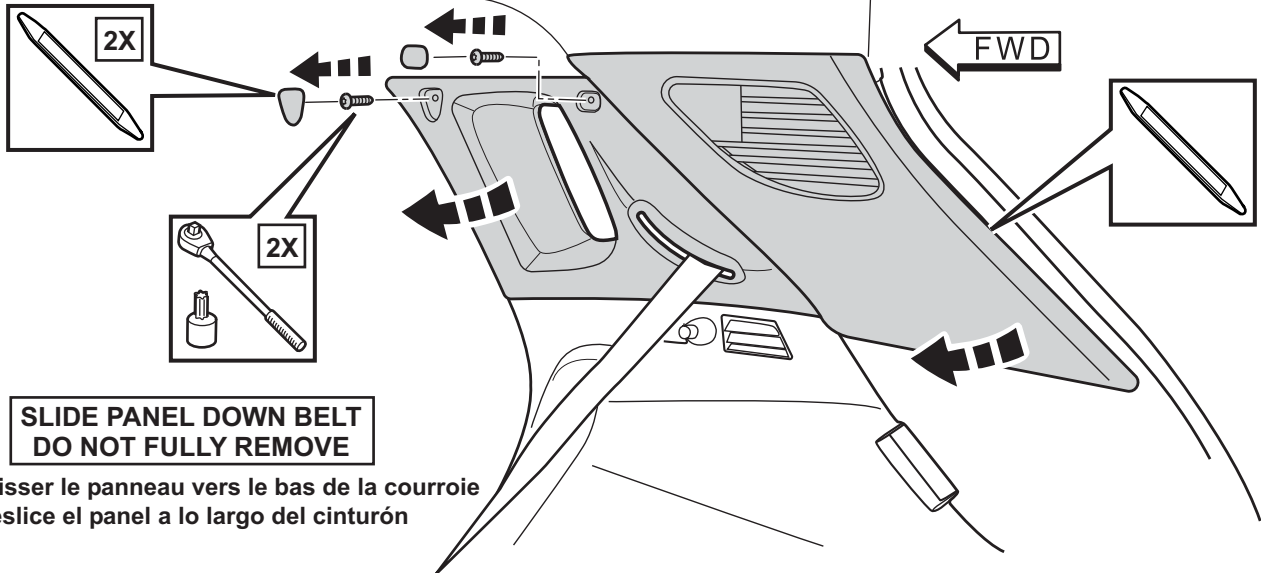


8

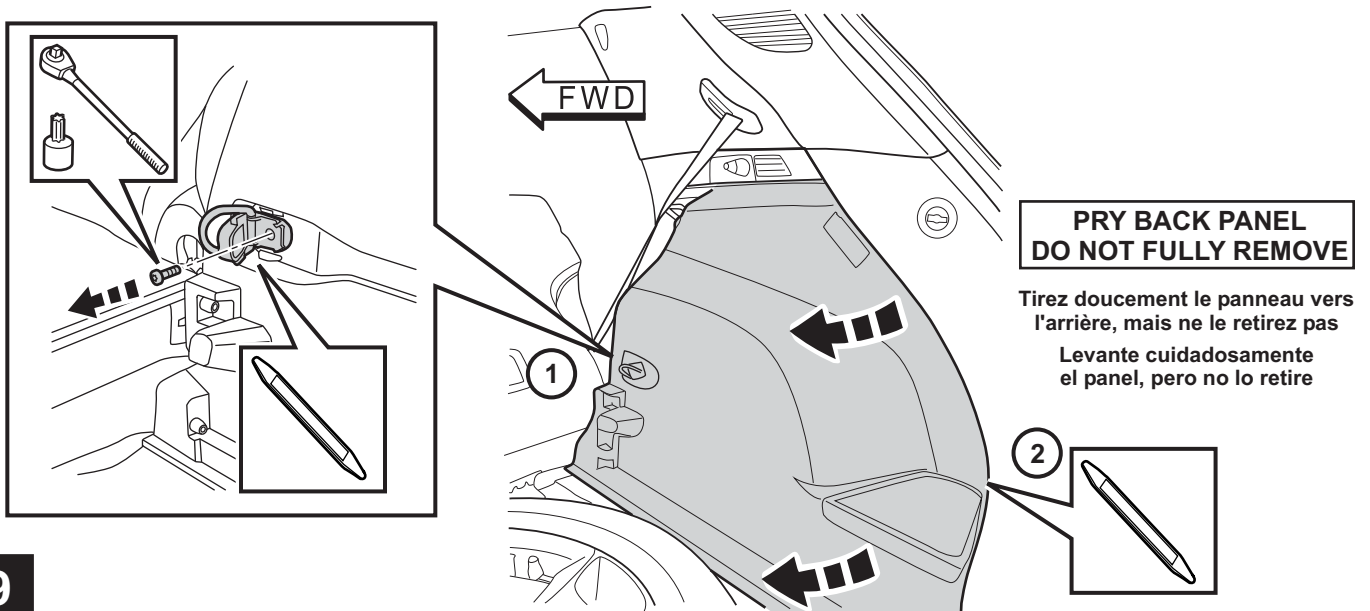

9

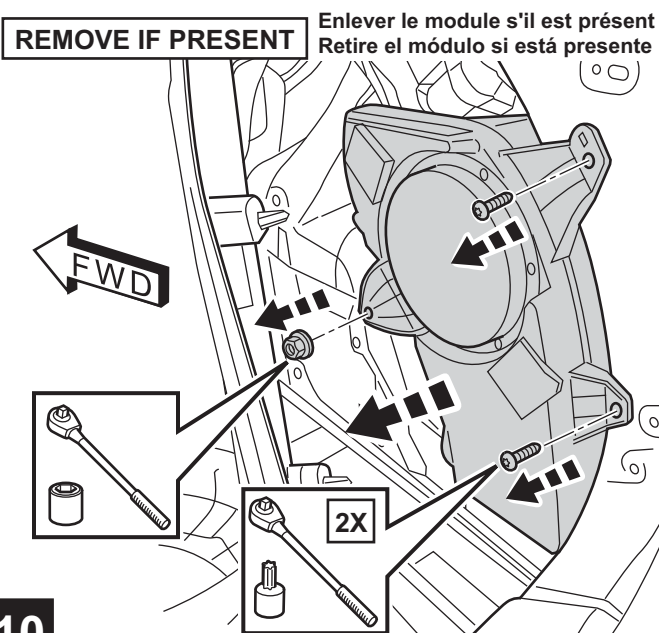

10

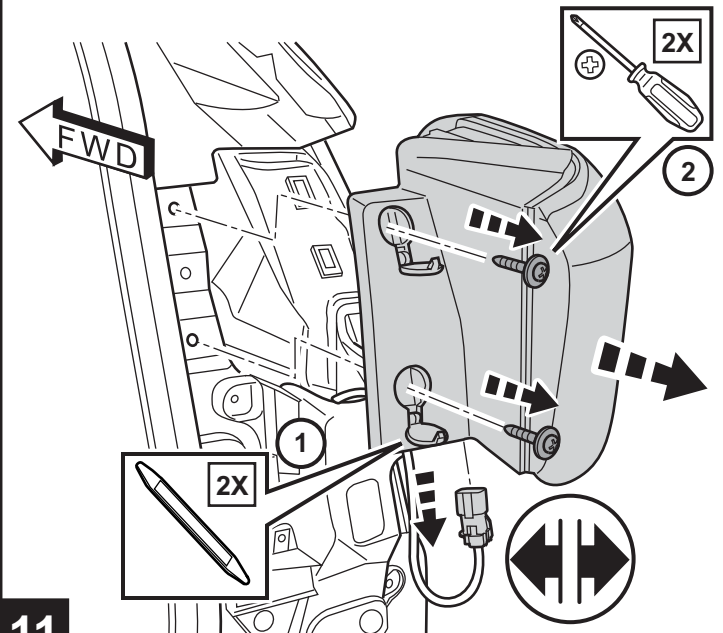

11