

Product 855324



855324 ProClip

Angled mount

Keep your device within easy sight and reach in your car! The ProClip makes it easier and safer to use handheld devices in vehicles. The ProClip is a mounting bracket that you attach to the dashboard of your car. Onto the ProClip, you can install any accessory, e.g. a holder for mobile phone or other communication device.

The ProClip is car specific, it is customized for each car model and has a perfect fit. The ProClip offers a firm mounting platform and is available in multiple positions for most vehicles. Discreet design that blends in well with the interior. Safe, neat and convenient!

The ProClip is easy to install, you can do it in a minute! You simply snap the ProClip into place in gaps in the interior, you do not need to drill holes or use special tools or dismantle the dashboard. Detailed mounting instructions included. The ProClip has predrilled AMPS holes for easy installation of a holder. Made of high grade ABS/Acetal plastic. Color: Black. Developed and produced in Sweden.

- Do you want to be able to switch between several holders on the same ProClip? Please see Brodit's MultiMoveClip.
- Are you installing larger devices or heavier equipment? Please see Brodit's Extra Strength Mounting Platforms and Pedestal Mounts.

EAN: 7320288553245

Item no 855324 fits:


Jeep Compass 17-18 (For all countries)

INSTALLATION INSTRUCTIONS

1.



2.

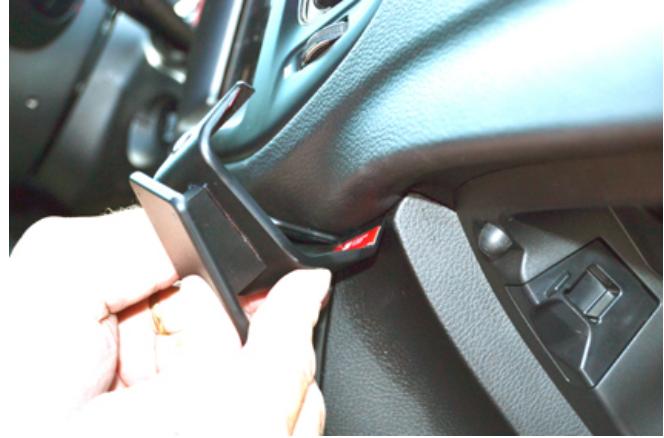

3.



4.



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the enclosed gap opener into the gap between the frame around the climate control panel and the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the cover of adhesive tape on the ProClip.

2. Press the lower angled edge of the ProClip into the gap next to the gap opener. Rotate the ProClip upward so the angled edge on the lower part hooks behind the lower dashboard panel. Then place your index fingers underneath the upper part of the ProClip and pull upward to hook the upper angled edge of the ProClip over the air vent edge. Pull out the gap opener. The gap between the vent frame and inside of the vent is a tight seam. To make the upper angled edge of the ProClip go all the way into the seam between the air vent and the surrounding panel frame, pull the ProClip towards you and press down at the same time. It might need to be wiggled a little. Listen for the click as the ProClip goes into place.

3 and 4. The ProClip is in place.